

Fuse Replacement

Required Tools

1. Replacement fuse (of correct size and rating)

Symptom- No power to the machine after checking power source.

WARNING: BEFORE MAKING REPAIRS, BE SURE ON/OFF SWITCH IS OFF AND MACHINE IS UNPLUGGED !

STEP #1



STEP #3



1. Locate the small black cap on one side of your machine. The cap will look like the one shown in the Step #1 photograph to the left.
2. Using thumb and fore finger grip the black cap firmly push in while rotating cap in direction shown.
3. Pull old fuse out of the cap and place a new fuse of proper size and rating in its place. Refer to the decal placed by the fuse holder on the machine or your owner's manual for proper size and rating of the new fuse. Replace the cap with fuse into the holder by pressing in firmly and rotating "against" arrow in Step #1 until locked