




PARTS LIST:

- (1) One Pre-Assembled Teflon Bracket
- (1) One Teflon Blanket
- (3) Three Black Screws

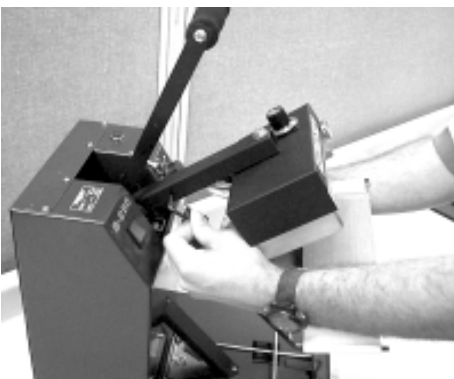

1. Insert top swinging lever of bracket assembly into hole on heat platen arm as shown to the left.



2. Slide Teflon blanket off of bracket for easier access on this step. Line up (3) three pre-drilled holes in the bracket assembly with the (3) three predrilled holes on the front of the main housing of the machine. Insert the (3) three black screws into these holes.



3. Replace the Teflon blanket onto the bracket and make sure that it lays on top of the rubber machine platen. The machine may now be used as recommended. Replace the Teflon blanket with a new one if it ever becomes worn (Item #82131).